

### Calculation of the edge zone width


The width of the edge zone is equal to 1/8 of the length of the shortest external convex wall, but not less than 1.0m and not more than 2.0m, then:

$$B = \frac{1}{8} \min(a_1, a_2, b_1, b_2) \text{ and } 1.0 < B < 2.0 \text{ m}$$

$t$  - EPS or XPS board thickness

#### Attention:

The number of anchors depends on the wind load and should result from the specialist calculation carried out for every building.

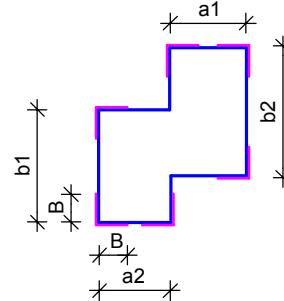

**No. 1.2.2 Arrangement of the panels and fixings for mineral wool - example**